

X32 series Setup Poster

P/N 39T5787

06/09/2005

Size : 11x13 inches

Color : 2 color job = Black (PMS Process Black C) and Red (PMS 032cvc)

(#Gray=45% Black, 20% Black)

Font : IBM Fonts and Helvetica Neue Family

Material : 100 gsm gloss art paper (Use 100% recycled paper in only Japan.)

Blue line shows die-cut. DO NOT PRINT.

Please change the barcode No.

Please change the printing country name if the poster is printed in other than China.

ThinkPad

설치 가이드

더 자세한 정보를 보려면 Access IBM 버튼을 누르십시오.

1 제품의 포장을 열고 내용물을 확인하십시오.




* 목록에 없거나, 누락되었거나, 손상된 부품과
복구 CD에 관해서는 뒷면을 참고하십시오.


참고: 컴퓨터를 사용하기 전에 사용 설명서에
수록된 안전 관련 사항을 읽으십시오.

2 배터리를 장착하십시오.

배터리는 장착 즉시 사용할 수
있습니다.

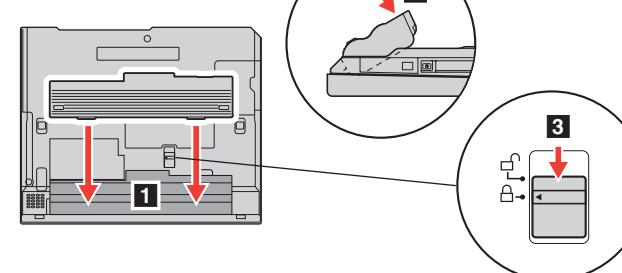

3 전원을 연결하십시오.

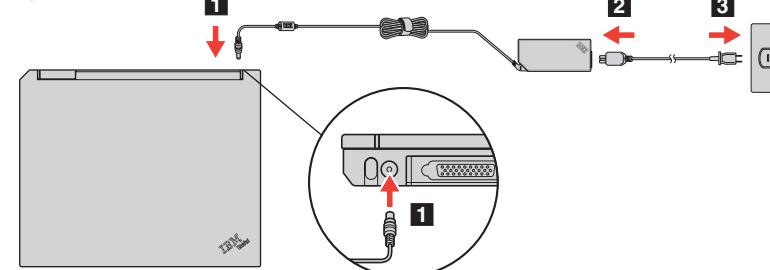

4 컴퓨터의 전원을 켜십시오.



5 트랙포인터를 이용하여 포인터를 이동하거나 원하는 항목을 선택하십시오.

포인터를 움직이려면 트랙포인트 캡을 손가락 끝으로 원하는 진행 방향으로 미십시오.
스페이스바 아래에 있는 오른쪽 및 왼쪽 버튼은 마우스의 오른쪽 및 왼쪽 버튼과 동일한
기능을 가집니다.

6 화면의 지시에 따라 운영 체제를 설정하십시오.

이 과정에는 수 분 정도의 시간이 소요됩니다. 과정이 진행되는 동안, 컴퓨터가 수 차례
재시작할 것입니다.


7 더 자세한 정보를 보려면 Access IBM 버튼을 누르십시오.



ThinkVantage™ Design

UltraConnect™ 무선 안테나

최적의 위치에 내장되어
있어 뛰어난 성능과 수신
거리를 자랑합니다.

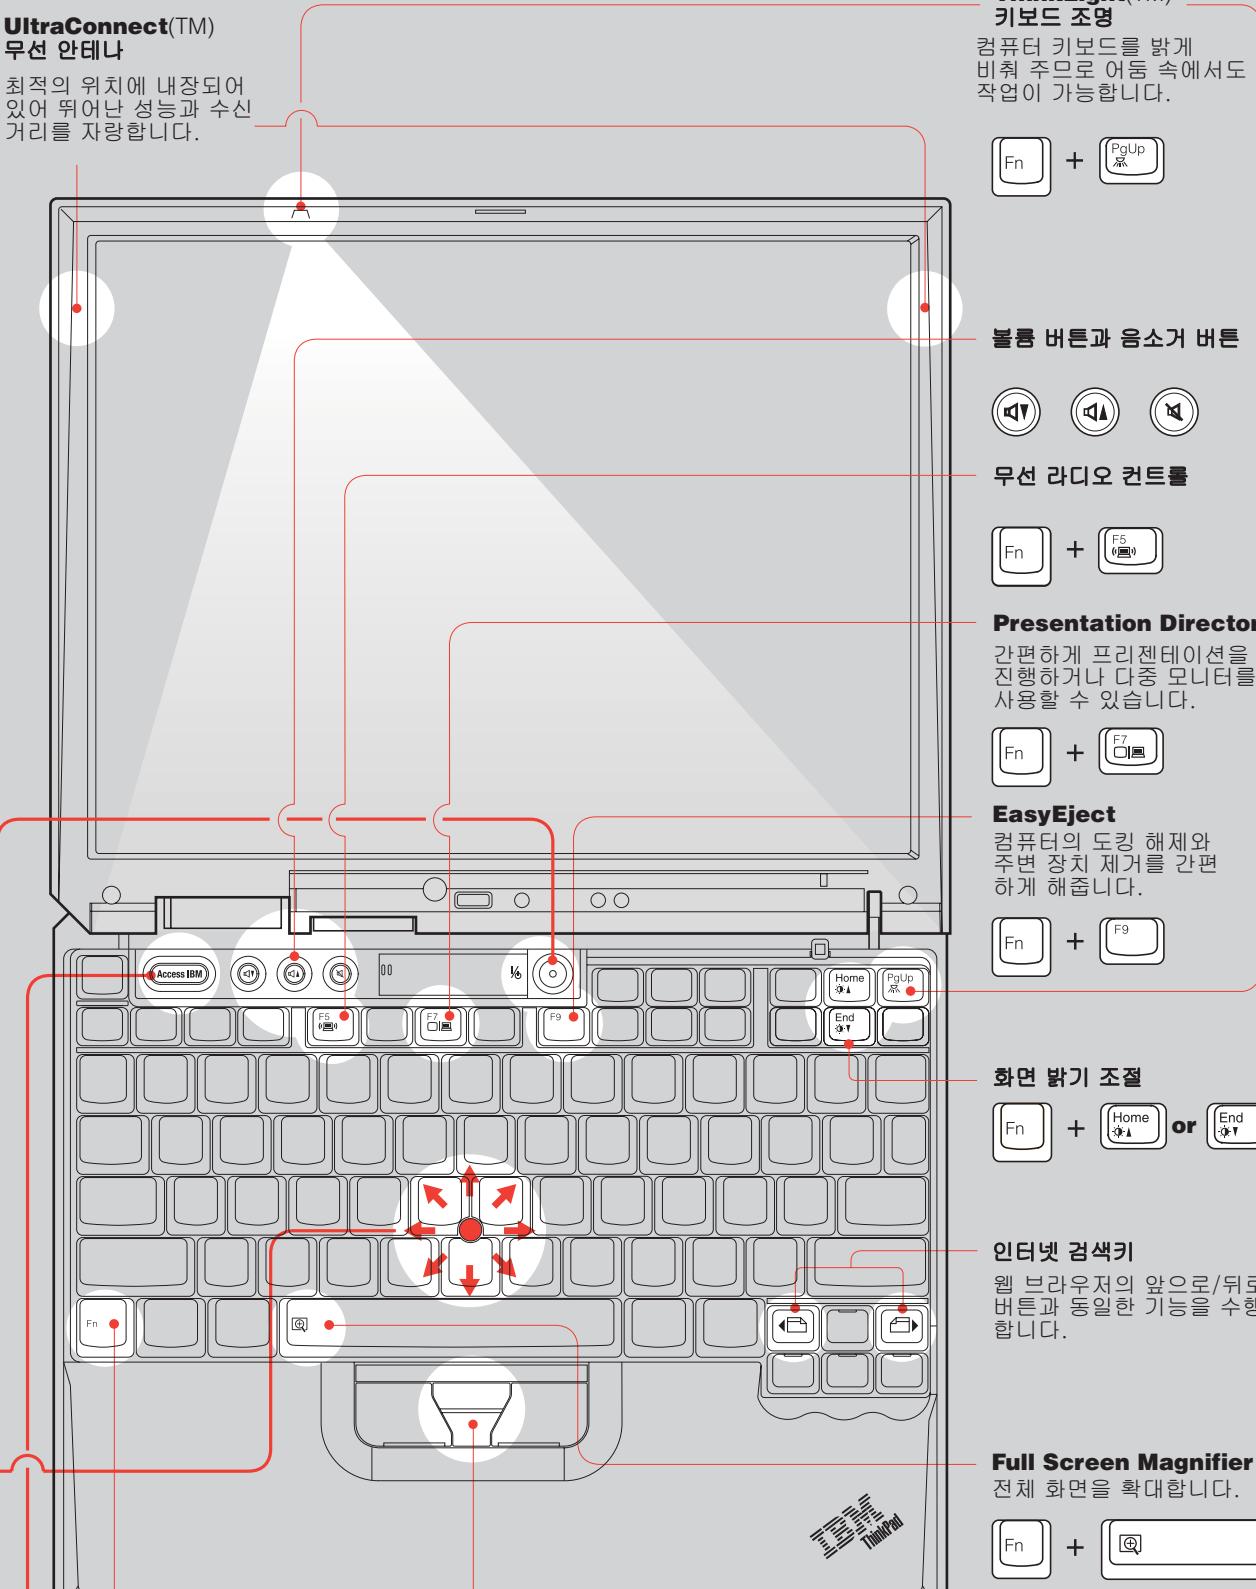

Fn 키

파란색 아이콘이 인쇄된 키와
함께 사용하면 ThinkPad
컴퓨터의 특수 기능을 수행할
수 있습니다.

트랙포인트 가운데 버튼

화면 상의 문서를 스크롤하거나
화면의 일부 영역을 확대하는데
사용됩니다.

ThinkLight™ 키보드 조명

컴퓨터 키보드를 밝게
비춰 주므로 어둠 속에서도
작업이 가능합니다.



볼륨 버튼과 음소거 버튼



무선 라디오 컨트롤



Presentation Director

간편하게 프리젠테이션을
진행하거나 다중 모니터를
사용할 수 있습니다.



EasyEject

컴퓨터의 도킹 해제와
주변 장치 제거를 간편
하게 해줍니다.




화면 밝기 조절



인터넷 검색기

웹 브라우저의 앞으로/뒤로
버튼과 동일한 기능을 수행
합니다.



Full Screen Magnifier

전체 화면을 확대합니다.



P/N: 39T5787